 


sWAP™

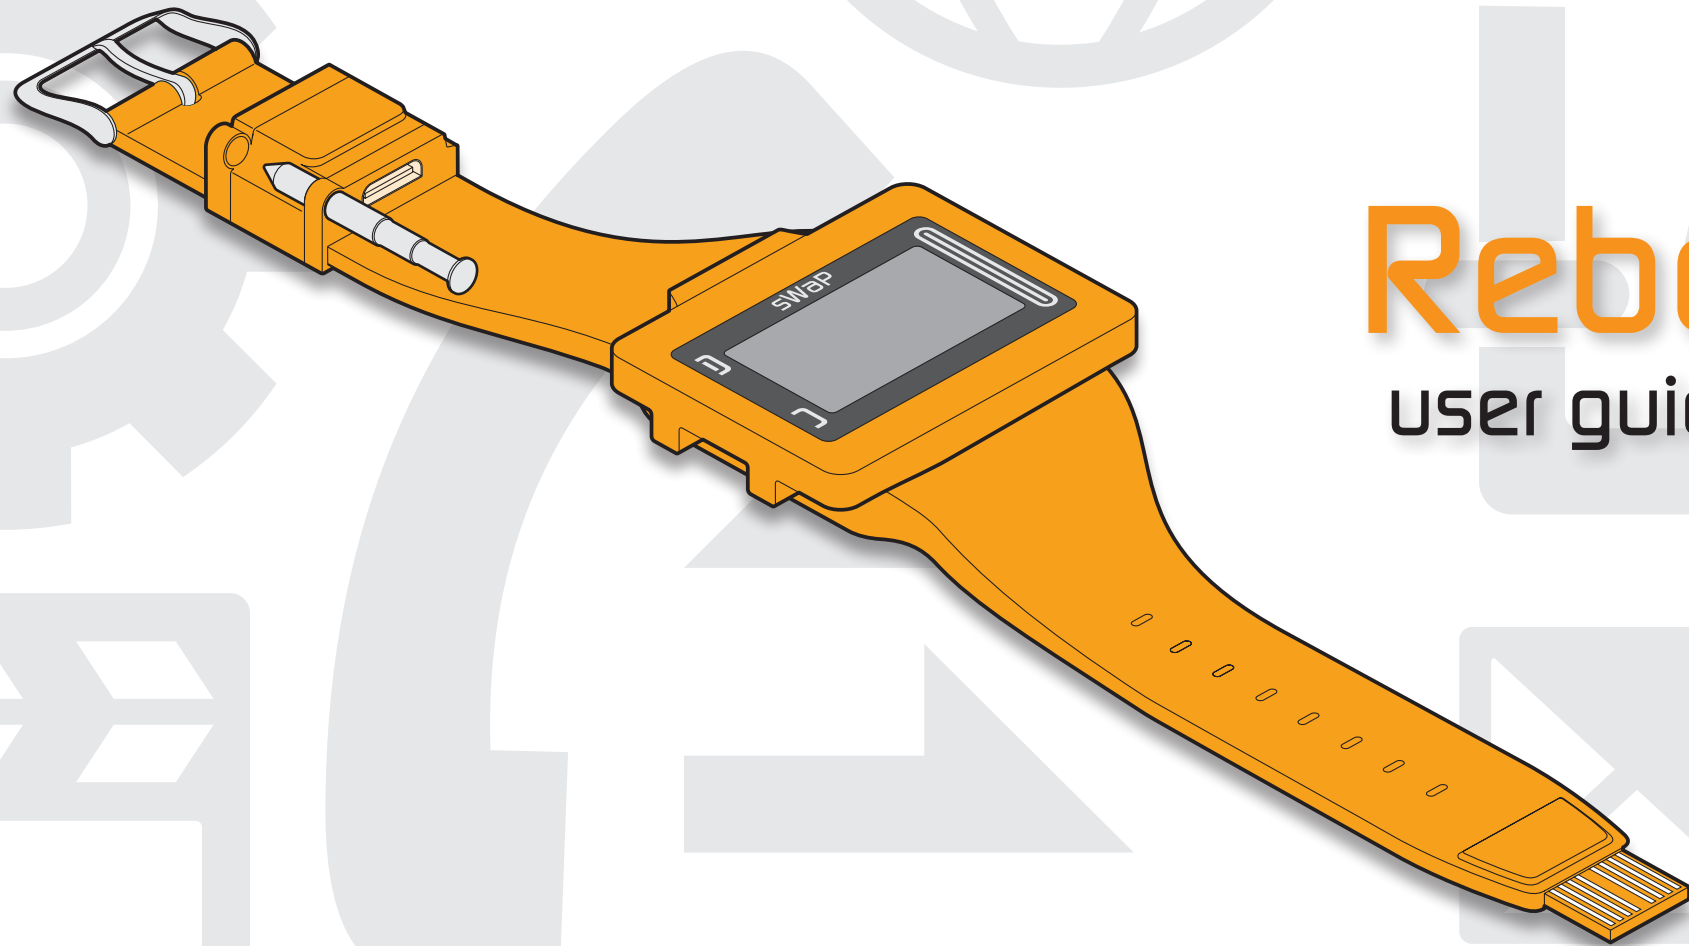

Rebel


user guide

Contents

Welcome to your sWaP™ Rebel	2	Your Phonebook (Contacts)	8	Settings	19
Getting started	3	Adding a new entry	8	Pen Calibration	19
Inserting your SIM card	3	Copying entries	8	Organizer	19
Charging the battery	3	Finding an entry	8	File manager	23
Wearing your sWaP Rebel	3	Other Phonebook options	8	Stopwatch	23
Removing/inserting the memory card	4	Messages	9	User Profiles	24
Using the wired earphones	4	SMS messages	9	Phone Setup	24
Switching on and off	5	MMS messages	11	Call Setup	25
Using the stylus	5	Voice mail server	12	Network Setup	25
Pen Calibration	5	Broadcast message	12	Security Setup	26
The clock face	5	Media	13	Restore Factory Settings	26
Menu map	6	Camera	13	USB link to your computer	27
Dialling a call	6	Photo album	14	Important safety information	28
Answering a call	6	Video recorder	14	Exposure to radio frequency (RF) signals	28
Rejecting a call	6	Video player	14	Operational precautions	28
Ending a call	6	Audio player	15	Medical devices	28
Voice activation	6	FM radio	17	Batteries	29
Using speed dial	6	WAP	18	Vehicles	29
In-call options	7			Specific Absorption Rate (SAR)	29
Auto keypad lock	7			EU directives	30
Call history	7			FCC warning	30

Welcome to your sWaP™ Rebel

 All the functions you need, right there on your wrist.

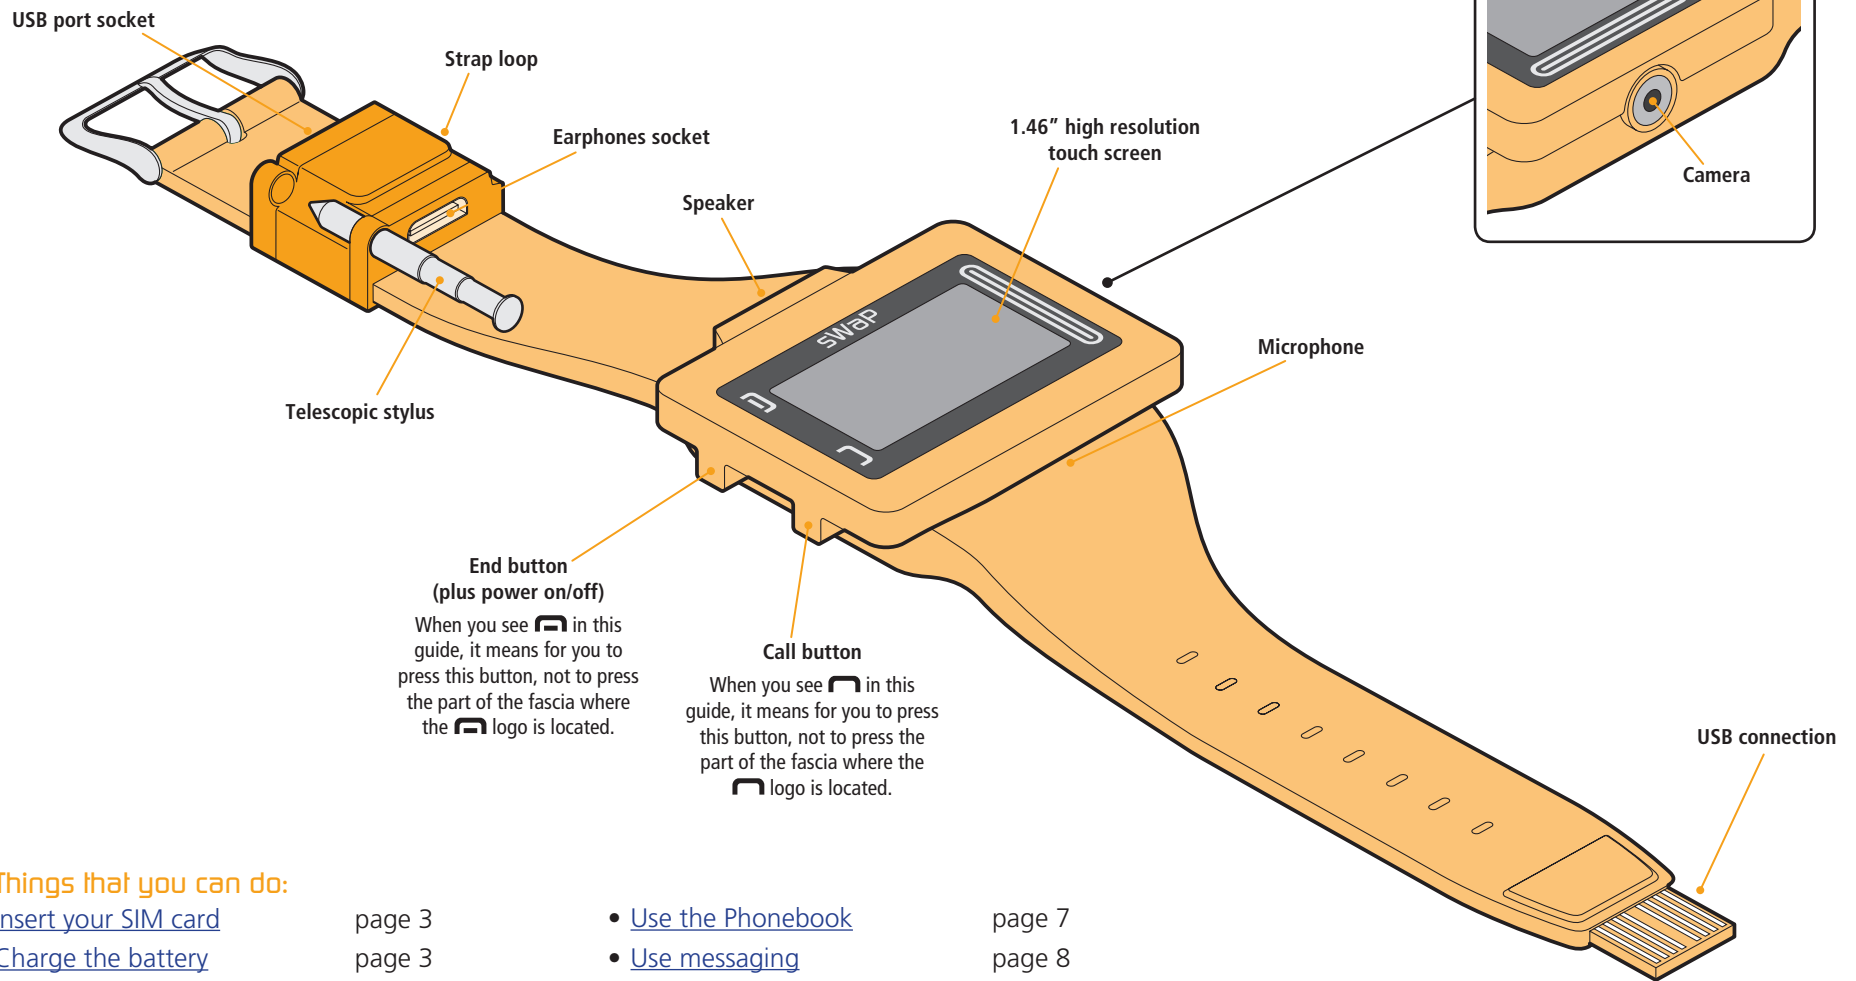

Things that you can do:

- | | | | |
|--|--------|---|---------|
| • Insert your SIM card | page 3 | • Use the Phonebook | page 7 |
| • Charge the battery | page 3 | • Use messaging | page 8 |
| • Switch on | page 4 | • Use multimedia applications | page 12 |
| • Dial/answer a call | page 5 | • Access websites | page 15 |
| • Use the earphones | page 6 | | |

 
Please also take a moment to read the [important safety information](#) located at the rear of this guide.

Getting started


Inserting your SIM card

Note: Avoid touching the gold contacts of your SIM card.

- 1 On the underside of your sWaP Rebel, carefully lever off the back cover to reveal the SIM card holder.

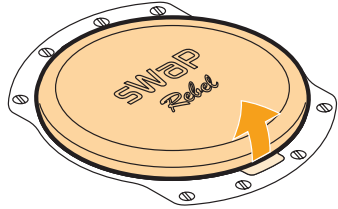

 
- 2 Slide back the SIM card holder to release it. Lift it up and then place your SIM card fully into the holder so that its gold contacts are facing down and the notched corner is facing outwards.

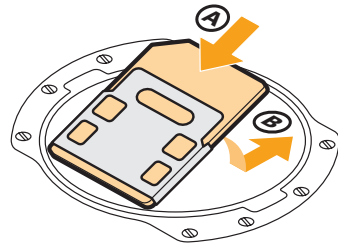


- 3 Carefully push down the holder and SIM card until they lie flat, then slide the holder forward so that it locks into place with a click.
- 4 Replace the back cover of your sWaP Rebel, making sure that it clicks shut.

Charging the battery

Charge your sWaP Rebel using the USB port on your computer. Your sWaP Rebel can be switched on or off when it is charging.

While charging, the battery indicator on the display will show the progress: 

 - 1 Carefully insert the USB connection on the strap into a vacant USB port on your computer.

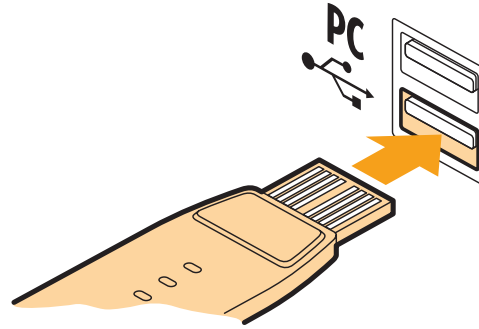


- 2 If your computer is not already switched on, switch it on to start charging your sWaP Rebel.


Wearing your sWaP Rebel

Wear your sWaP Rebel in the same way as any watch.

 Note: You will find that if you wear it on your left wrist then the camera will face away from you, making it easier to photograph and film other people.

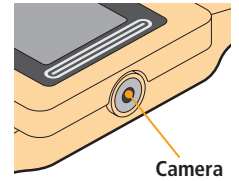

 - 1 Place your sWaP Rebel on your wrist and buckle the clasp as you would with any normal watch.
- 2 Insert the USB connection at the end of the strap into the corresponding socket on the strap loop.

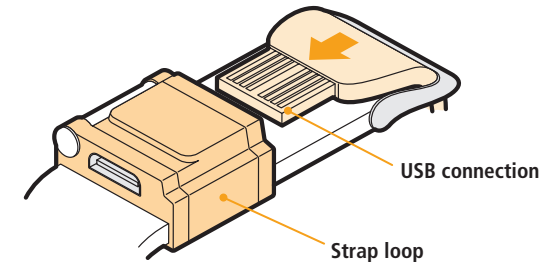


This will help to keep the contacts of the USB connection free from damage and is also essential if you wish to use the headphones.

Removing/inserting the memory card


Your sWaP Rebel comes with a 2 GigaByte memory card to store all of your messages, pictures, videos and other information. You do not normally need to remove the memory card, however, there may be the occasional need to transfer memory content to, or from, another similarly equipped device.

The memory card conforms to the Micro SD standard and is located below the SIM card holder.

 
- 1 On the underside of your sWaP Rebel, carefully lever off the back cover to reveal the SIM card holder.

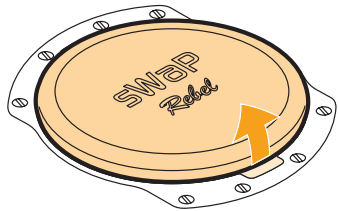

 - 2 Slide back the SIM card holder to release it. Lift it and the SIM card (if fitted) up to reveal the memory card.

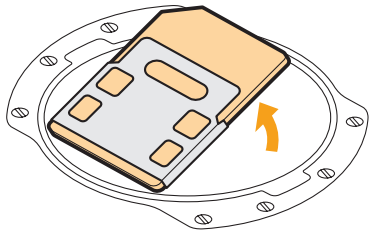

 - 3 Carefully lift the paper pull tag attached to the memory card holder to disengage and raise the holder. You can now slide out the memory card.

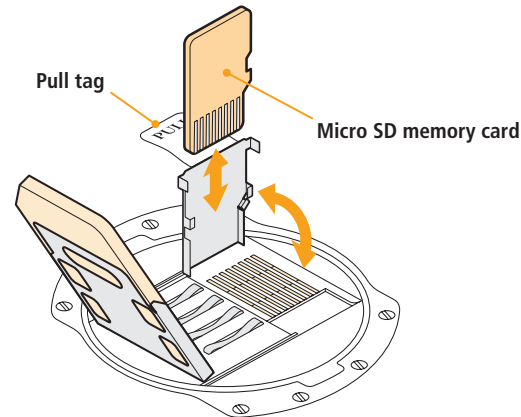


- 4 To reinsert the card, ensure that it is oriented as above and then carefully slide it into the holder. Close the memory card holder until it clicks into place, taking care to leave the pull tag accessible
- 5 Carefully push down the holder and SIM card until they lie flat, then slide the holder forward so that it locks into place with a click.
- 6 Replace the back cover of your sWaP Rebel, making sure that it clicks shut.

Using the wired earphones

The supplied earphones and microphone can be used to listen to music/videos/FM radio as well as making and taking calls.

- 1 Carefully insert the right-angle plug of the earphones into the connector located on the strap loop.

 Note: The USB strap connection must be inserted into the other side of the loop in order to provide the earphone signals.

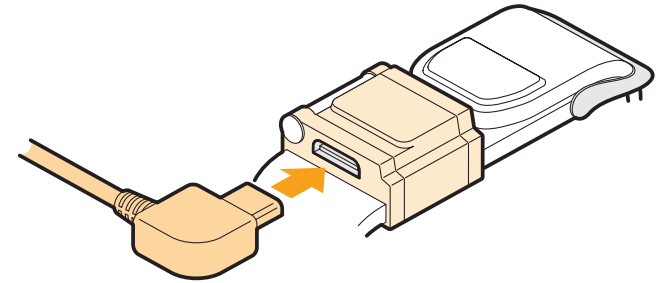


The small button on the microphone pod can be used to answer* and terminate calls.

- * Within the **Headset** profile, if the **Answer Mode** option is set to **Auto**, then calls will be answered immediately - you can alter this. See the **Settings** section for details.


Switching on and off

 Press and hold the upper side button until the screen responds, then release.

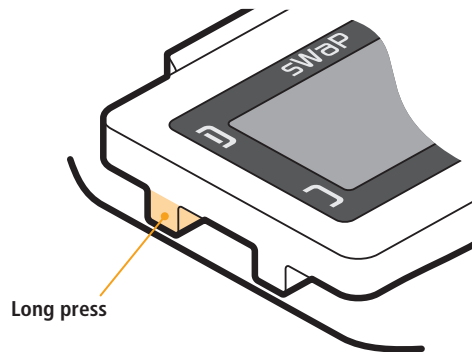


Using the stylus

 The stylus is a telescopic pointer with which you can select items more accurately on the touch screen. It is stored in the strap loop of your sWaP Rebel.

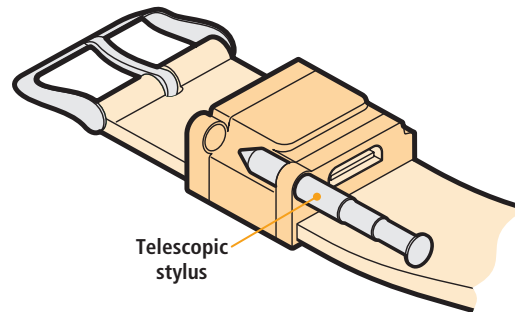

Pen Calibration

For best results, we recommend that you calibrate the screen of your new sWaP Rebel. This will ensure the best accuracy between your stylus movements and the reaction of the screen.

 
- 1 From the clock face, tap the **Menu** link in the lower left corner of the screen.
- 2 Tap  (twice, if necessary).
- 3 Tap **Pen Calibration** and then follow the on screen instructions, using the stylus to tap where instructed.

TIPS:







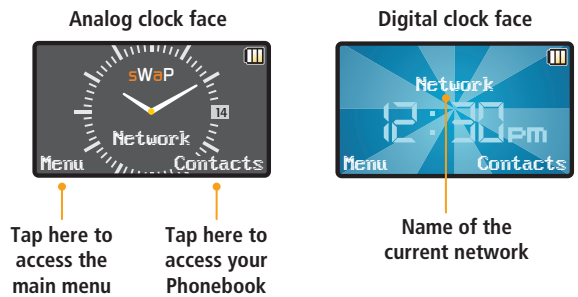









- When tapping on the displayed touch points, view the screen exactly as you would in normal operation.
- For best results, go through the procedure twice.
 - Repeat the procedure once a month to keep accuracy at the optimum level.

The clock face

When your sWaP Rebel is not engaged in other activities, it will display a clock face (analog or digital):



 
The chosen clock face will overlaid with the current network name plus selectable options (in the two lower corners). The top edge of the clock face will also show one or more of the following status icons:

-  Signal level (0 to 4 bars)
-  Battery charge status
-  Missed call
-  SMS message(s) received
-  MMS message(s) received
-  GPRS data connection available
-  Earphones attached
-  Auto keypad lock is off
-  Auto keypad lock is on
-  Bluetooth function enabled
-  Alarm set
-  User profile set to use ring alert only
-  User profile set to use vibrate first and then ring
-  User profile set to use vibrate and ring alerts
-  User profile set to use vibration alert only
-  Stopwatch running

From the clock face, you can access the **Menu**, view your **Contacts** or make a call (tap and hold anywhere). See also Phone Setup > Swipe Function.



Menu map

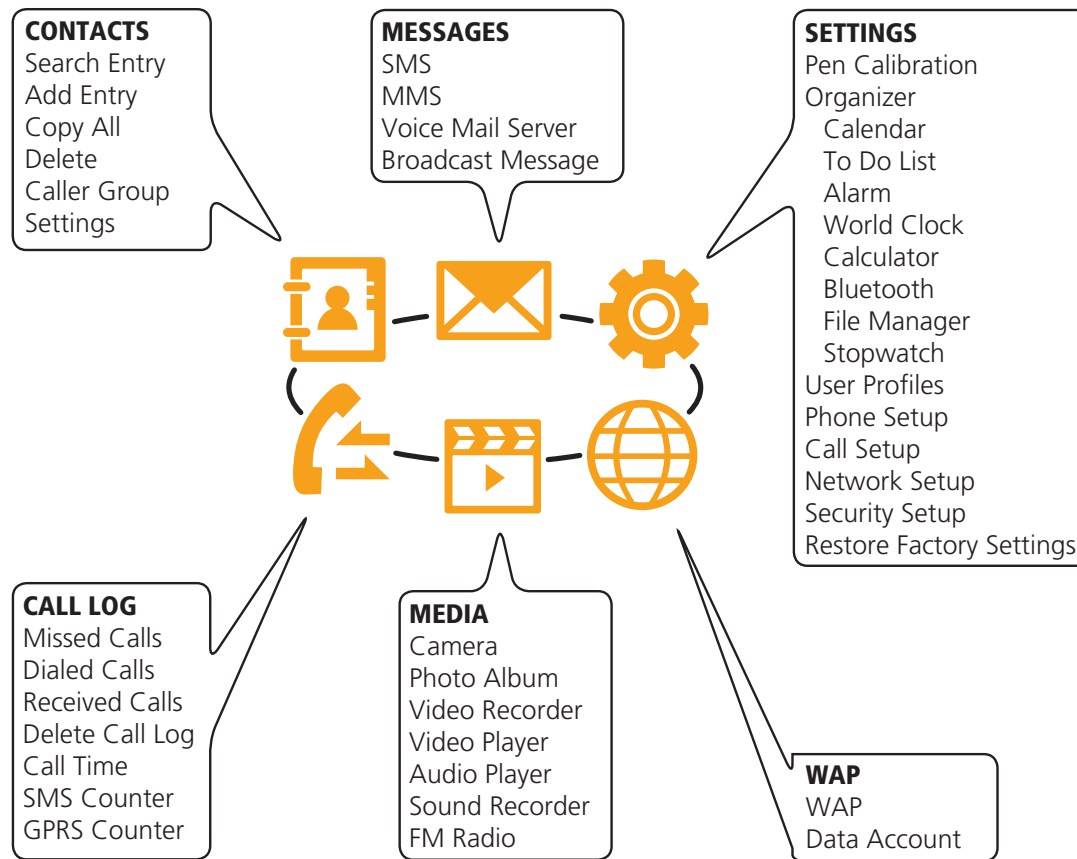From the clock face, tap the **Menu** option (or press the lower button) and then choose one of six icons:



Tap the **Back** option or press  to exit from the menu and return to the clock face.


Dialling a call

- 1 From clock face, tap and hold the screen for 2 seconds to show the dial page:
- 2 Tap the phone number and then press the  button. Alternatively, tap  to access your Phonebook.



Answering a call

When the call alert sounds (or vibrates):

- Press the  button twice to answer, or
- Tap **Option** and then tap **Answer**, or
- Tap **Option** and then tap **Deflect** to dial a number (or choose from your Phonebook) to which you wish to send the incoming call.
- Tap **Option** and then tap **Call background sound** to choose a sound effect (such as Pub, Motorcycle, Sidewalk, etc.) to play in the background and answer the call once chosen.


Rejecting a call

- Press the  button or tap **Reject** in the lower right corner.



Ending a call


- Press the  button or tap **Option** in the lower left corner and then tap **End single call**.

Voice activation

- From the clock face, press and hold the  button and then say either "CALL xyz" or "FIND xyz", where xyz is a Phonebook contact name.

Using speed dial

- Tap and hold a number between **1** and **8** to dial one of your most commonly used contacts*.
- Tap the  button to view your list of speed dial contacts. Here you can edit an entry, delete an entry, or call an entry (highlight the required entry and press  to place the call).


* To use speed dial, you need to first store your special contact numbers - use the  button or see [Speed Dial](#) within the Phone Setup section.

In-call options

During a call you can access a number of features by tapping **Option**:

- **Hold single call** - Place the call on hold*.
- **End single call** - End the current call.
- **New Call** - Dial a new number*.
- **Phonebook** - Access your Phonebook.
- **Messages** - Access your messages.
- **Sound recorder** - Record the call.
- **Call background sound** - Select from a range of sound effects to play in the background of your call.
- **Mute** - Switch off the microphone for privacy.
- **DTMF** - Enable audible DTMF (Dual Tone Multi Frequency) tones when dialling numbers.


In the call screen, you can also:

- Tap  to re-display the numeric keypad.
- Tap **H-Free** to activate the loudspeaker.
Tap **H-Held** to return to quiet mode.


* Network support required.

Auto keypad lock

To help you avoid accidentally activating features on your sWaP Rebel or making unwanted call, you can invoke the auto keypad lock feature. When enabled, this feature will lock the screen after a certain period of inactivity (from 5 seconds to 5 minutes).


Once locked, you simply need to press the  button and then tap your stylus on a displayed target on the display to unlock your sWaP Rebel.

To enable/disable the auto keypad lock feature

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Security Setup**.
- 4 Tap **Auto Keypad Lock**. Enable the feature and choose the required period of inactivity: 5 secs, 30 secs, 1 min or 5 mins.

Call history

Your sWaP Rebel maintains records of all incoming, outgoing and missed calls as well as text message quantities and data usage. You can use these records to make calls, populate your Phonebook and/or keep track of your call charges.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary) to view the **Call history** options:


- Missed Calls
- Dialed Calls
- Received Calls
- Delete Call Log
- Call Time
- SMS Counter
- GPRS Counter

Select the required item to view a list of related options or details.

Your Phonebook (Contacts)


Your Phonebook is where you store all of your contact details for quick access and rapid dialling.

There are two main ways to enter your Phonebook (Contacts):

- From the clock face, tap **Contacts**.
The list of Phonebook contact entries will be shown.
or
- From the clock face, tap **Menu**. Then tap  (twice, if necessary).
The main Phonebook menu will be shown.

Adding a new entry


To add a new entry you need to enter the Phonebook via the Menu:

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Add Entry**.
- 4 Choose where to store the entry: Tap either **To SIM** or **To Phone**. The latter uses the sWaP Rebel memory and allows more details to be stored.
- 5 Use the labelled information fields to enter the relevant details about your contact.

For contacts stored within the sWaP Rebel memory, you can associate an image and/or a particular ring tone to each person. You can also collect your contacts into groups, such as Friends, Family, Business, etc. These options are located lower down in the list of information fields.

Copying entries

You can copy all of the contacts from your SIM card to the sWaP Rebel memory and vice versa.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Copy All**.
- 4 Tap either **From SIM** or **From Phone** as appropriate.

Importing contacts from another phone


The simplest way to import contacts is to use your SIM card as a carrier.

- 1 Fit your SIM card into the other phone.
- 2 Copy the contacts from the phone memory to the SIM card.
- 3 Fit your SIM card into your sWaP Rebel.
- 4 Use the **Copying entries** procedure (above) to transfer the contacts across to your sWaP Rebel memory.



Finding an entry

You can find entries in two main ways: By scrolling through the list of contacts; or by entering one or more characters of the name to make a search.

Finding an entry by scrolling:

- 1 From the clock face, tap **Contacts**.
- 2 Tap the up or down arrows (or use the up/down button) to scroll through the list.
- 3 When the required entry is highlighted, tap  to dial or tap **Option** to send a message or edit the entry.

Finding an entry by searching:

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Search Entry**.
- 4 Enter one or more characters of the name and then tap **Option** and then tap **Search**.
- 5 When the required entry is highlighted, tap  to dial or tap **Option** to send a message or edit the entry.


Other Phonebook options


There are numerous other things that you can do within your Phonebook. Here are just a few:

- Send SMS or MMS messages to a contact by starting from the Phonebook. Enter the Phonebook via Contacts (Option: Send SMS or Send MMS).
- Edit characteristics for your caller groups or create new caller groups in which to collect your contacts. These groups are particularly useful when you need to regularly send messages to more than one person. Enter Phonebook via the menu (Option: Caller Group).
- Prevent calls from certain people by adding them to a black list within your Phonebook. (Option: Add to BlackList)
- Delete entries individually or clear the entire SIM card or sWaP Rebel memory. Enter Phonebook via the menu (Option: Delete).
- Check how much memory space you have remaining. Enter Phonebook via the menu (Option: Settings > Memory Status).
- Choose which memory you prefer to use to store contacts: SIM or Phone. Enter Phonebook via the menu (Option: Settings > Preferred Storage).
- Create a vCard containing your contact details which you can easily send to other people, rather like an electronic business card. You can send your vCard either via SMS or MMS messaging, Bluetooth link or as a file that can be downloaded to a computer via the USB cable. Enter Phonebook via the menu (Option: Settings > My vCard).

Messages


Your sWaP Rebel enables you to stay in contact using two different kinds of messages. SMS is the method supported by all mobile phones which allows text plus certain small media attachments to be sent and received. MMS is the newer format that allows you to send and receive larger photos, video clips and sound recordings, in addition to text.

 
When an incoming message is received, your sWaP Rebel will alert you and display the sender's number* or their name if they are listed in your Phonebook. The clock face will also show the  icon until you have read the message.

- Tap **Read** to go straight to the message immediately. or
- From the clock face, tap **Menu**. Tap  (twice, if necessary). Then tap either **SMS** or **MMS** and then tap **Inbox**.

* Subject to availability.

Writing an SMS message

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **SMS**, then **Compose Message**.
- 4 Tap out or handwrite your message within the editor page:

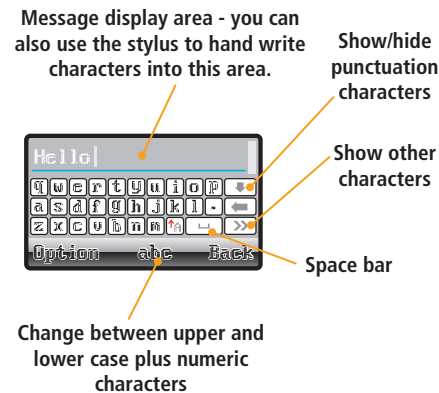

- 5 You can optionally add other elements to your message. Tap **Option**:

- **Insert Number** from your Phonebook.
- **Insert Name** from your Phonebook.
- **Insert Object** to add small images, animations or melodies.
- **Format Text** to change the size, style and alignment of the characters.
- **Use Template** to quickly add a standard phrase to your message.
- **Insert Bookmark** to add internet addresses stored in the WAP browser.

Note: Not all mobile phones are able to display or play media attachments or show text formatting.

- 6 When your message is complete, tap **Option** and then tap **Send**.


You can now choose how to send and/or save the message: Send to one person, send to a list of people, send to one of the your groups, or just save the message for later.

- 7 Tap the required send/save option and then either enter the phone number (or tap **Search** to find a Phonebook entry) or choose the group of recipients.


- 8 Tap **OK** to send/save your message.

If you chose to save your message, it will be stored in the **Outbox**, which you can choose from the main Messages menu.

Reading an SMS message

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **SMS**, then tap **Inbox**. The list of received messages will be shown, each listed with either the phone number or the name (if in the Phonebook) of its sender. The prefixed envelope icon will be shown closed for unread messages or open for previously viewed ones.
- 4 Tap the required message to open it. (Note: Tap **Re..** to send a reply to the sender).
- 5 Tap **Option** to view the range of actions available to you:
 - **Reply** allows you to compose and send a response to the original message.
 - **Delete** removes the currently opened message.
 - **Edit** allows you to alter the message and then send it to one or more new recipients.
 - **Forward** allows you to send the message to one or more new recipients without editing.
 - **Multi operation** allows you to choose a selection of messages and then collectively delete them or delete all messages from a particular sender.
 - **Copy to ...**, **Move to ...**, **Copy All** and **Move All** allow you to copy or transfer messages from one memory area to the other.
 - **Delete All** allows you to keep your Inbox clear of clutter.
 - **Use Number** and **Use URL** are particularly useful when there are phone numbers or website addresses within the original message. These options allow you to use them to make calls, save to your Phonebook or access the website, as appropriate.

SMS message settings


- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **SMS**, then tap **Message Settings**.
 - **Profile Setting** determines important message delivery criteria for one or more networks.
 - **Report Settings** allows you to request a Delivery Report when your messages are received by the recipients. Reply Path is a network option that is not normally needed.
 - **Memory Status** shows the remaining space for messages in memory.
 - **Preferred Storage** allows you to choose which memory to use.
 - **Message Signature** allows you to enter text to use as a standard signature and append it to every message that you send.

MMS messages


MMS messages are structured in a similar way to slide show presentations. Each message consists of one or more slides, with each slide able to contain text, an image, an audio file, a video clip, a file attachment or any combination of these. When the message is played, each slide and its contents are shown in order. You can optionally adjust the timing of the slides, for instance, to keep showing an image until a clip of music has finished playing.

Note: MMS messages require a GPRS connection as part of your service provider agreement. Also, not all mobile phones can accept or display MMS messages. You must also choose the correct initial settings to match your network. Please see **MMS connection configuration** at the end of this MMS section.

Writing an MMS message

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **MMS**, then tap **Compose Message**. A series of blank fields will be shown. Each has a different function:
1-To; **2-Cc (copy);** **3-Bcc (blind copy);** **4-Subject;** **5-Edit content**
Tap on a field that you want to use, and then tap **Edit**.
For fields **1, 2** and **3** you can enter any number of phone numbers and/or email addresses.
Field **4** is the message Subject and will invoke the standard text editor.
Field **5** is where you create and determine the content. When you tap **Edit Content** for field 5 for the first time, you will see the text editor for the first slide.
- 4 Enter/edit your text and then tap **Option**.
To add an item to the current slide, tap **Add Picture**, **Add Audio**, **Add Video** or **Add Attachment**.
In each case, tap **Phone** or **Memory Card** to choose the location of the item. Your sWaP Rebel applications use **Phone** storage as standard, however, this can be changed within each application (the memory card has a much larger capacity).
You will then see the folders located within the chosen storage area, e.g. Images, Audio, Photos, Video, etc.
Tap the appropriate folder name to view the contents.
Tap the required item to add it to your slide.
- 5 For each item type, repeat step 4. Remember that you can only have one of each item type per slide. If you add a second image to a slide, it will overwrite the first one.
- 6 If necessary, add one or more new slides to accommodate multiple items of the same type. From the text editor, tap **Option** and then tap either **Add Slide Before** or **Add Slide After**. You will now see the blank text editor for the new slide. It is not necessary to have text on every slide. Repeat steps 4 and 5 to populate the new slide.
- 7 To change between slides, tap **Option** and then tap either **Previous Slide** or **Next Slide**, as appropriate.
- 8 When you have completed the slides you can see how they will play. Tap **Option** and then tap **Preview**. If necessary, you can change the timing. Tap **Option** and then tap **Slide Timing**. Use the editor to change the time (in seconds) that each slide is displayed.
- 9 Once the message is complete, tap **Option** and then tap **Done**. You will now see the initial group of fields where the addressing is performed.
If not already done, enter the recipient phone numbers and/or email addresses and then tap **Done**.
- 10 You can now choose to **Send Only**, **Save and Send** or **Save to Drafts**.
If you did not enter any recipients, the only option will be **Save to Drafts**.

Reading an MMS message


- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **MMS**, then tap **Inbox**. The list of received MMS messages will be shown, each listed with either the phone number or the name (if in the Phonebook) of its sender.

The prefixed envelope icon will be shown closed for unread messages and open for previously viewed ones.

- 4 Tap the required message to open it.
- 5 Tap **Option** to view the range of actions available to you:
 - **Reply** allows you to compose and send a response to the original message.
 - **Reply by SMS** allows you to contact the sender via SMS.
 - **Reply All** allows you to send a response to the sender and all of the original recipients.
 - **Forward** allows you to send the message to one or more new recipients without editing.
 - **Delete** and **Delete All** allow you to keep your Inbox clear of clutter.
 - **Properties** allows you to view the addressing details, the subject name and file size of the message.
 - **Use Details** allows you to use the addressing details of the message.

MMS connection configuration


Before you can use MMS for the first time, you must ensure that the MMS settings are correct for your network connection.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **MMS**.
- 4 Tap **Message Settings**.
- 5 Tap **Server profile**.
- 6 Tap the appropriate network provider name and tap **Activate profile**.

This process is required only once, you are now ready to use the MMS application.

Voice mail server

This option allows you to configure the phone number of your network service provider's voice mail system. These details are often set automatically by your SIM card.


- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Voice Mail Server**.
- 4 Tap one of the entries and tap **Edit**.
- 5 Tap the upper entry, tap **Edit** and enter a name for the network/server.
- 6 Tap **Option** and tap **Done**.
- 7 Tap the lower entry and enter a valid number for the voice mail server, as advised by your service provider. Tap **OK** and then confirm to save.

Listening to voice mail messages

- 1 Tap **Voice Mail Server**.
- 2 Tap appropriate server name.
- 3 Tap **Call Voice Mail**.

Broadcast message

These are text messages that contain information relevant to your location, which you can choose to receive. The messages could contain local weather forecasts, traffic reports or special offers in local establishments.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Broadcast Message**. The menu provides a number of options:
 - **Receive Mode** enables or disables the broadcast messages feature.
 - **Read Message** allows you to view any received broadcast messages.
 - **Languages** allow you to choose to receive all messages or only those in English.
 - **Channel Settings** allows you to optionally refine which channels (0 to 999) you wish to receive. As standard, you will receive messages from all channels.

Media

Your sWaP Rebel is a fully formed multimedia device that can handle video and music just as smoothly as it deals with your phone calls.


Your sWaP makes great use of its in-built high resolution camera, which can operate as a video camera as well as capturing still images.

 
Media features include:

- Camera
- Photo Album
- Video Recorder
- Video Player
- Audio Player
- Sound Recorder
- FM Radio


Camera

Allows you to capture high quality still images which you can retain on your sWaP Rebel or transfer elsewhere.

- 1 From the clock face, tap **Menu** or press the lower button.
- 2 Tap  (twice, if necessary).
- 3 Tap **Camera**. The camera viewfinder will be shown:

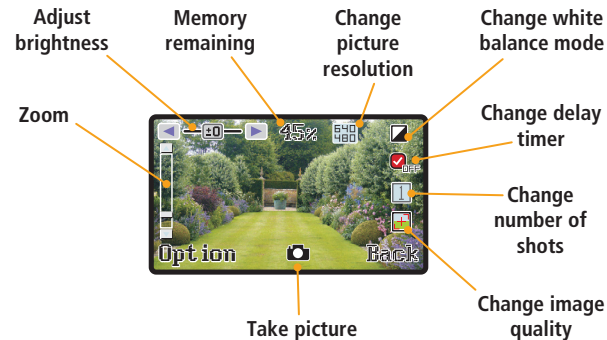

The camera lens is located on the right side of your sWaP Rebel. Ensure that it has a clear view to your subject.


- To capture a picture, tap  on the screen.
The screen will show your captured image and provide two options:
Tap **Continue** to save the picture to memory, or
Tap **Delete** to remove it.
When you select **Continue**, the image will be stored in the currently chosen memory location, either Phone or Memory Card.
- Use the accompanying **Photo album** application to view your video recording.

To change camera settings, you can either tap the screen icons or tap **Option** to view the following settings:

- **Camera Settings** includes: Shutter sound, EV (brightness), banding, delay timer, etc.
- **Image Settings** includes: Picture size and quality.
- **White Balance** includes: Daylight, Tungsten, Fluorescent, etc.
- **Scene Mode** includes: Night mode or Auto.
- **Effect Settings** allows you to apply a special effect to the captured video, such as greyscale, various sepia tints or colour inversion.
- **Add Frame** allows you to choose a frame for your pictures, which will be superimposed on the final image.


Photo album

 
Allows you to view, organise and do things with your photos, such as send to friends or use them as wallpaper on your sWaP Rebel.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Photo Album**. Your photos will be shown, either as a list (showing thumbnail views, filenames, dates and sizes for each entry) or as a matrix of thumbnail views.
- 4 To see options for a photo, tap on a photo entry. The menu shows a number of options:
 - **View** displays the selected photo. You can then tap the left and right arrows to move through your photos.
 - **Browse Style** allows you to change between the list and matrix views of your photos.
 - **Forward** allows you to assign the selected photo for use in your sWaP Rebel (as wallpaper, screensaver or power on/off image); as the picture for a contact in your Phonebook; or send the photo to someone either via MMS message or by Bluetooth link. The latter option will guide you through the process of searching for and bonding with a Bluetooth device in your vicinity.
 - **Rename** allows you to change the standard filename.
 - **Delete** and **Delete All Files** allow you to clear away unwanted photos.
 - **Sort By** allows you to list your photos in order by name, type, time or size.

Video recorder

Uses the integral camera to capture moving images and sound as video clips (.AVI format) which can be sent to friends or transferred to a computer.

- 1 From the clock face, tap **Menu** or press the lower button.
- 2 Tap  (twice, if necessary).
- 3 Tap **Video Recorder**. The video viewfinder will be shown:

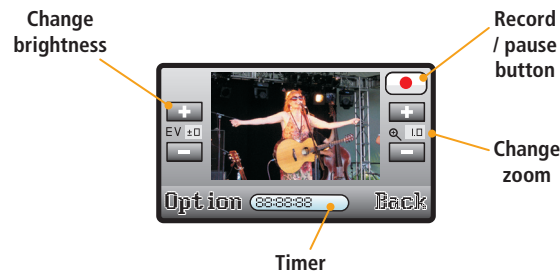

The camera lens is located on the right side of your sWaP Rebel. Ensure that it has a clear view to your subject.

To start recording: Tap .

The screen will show the video image as it is captured.

To pause recording: Tap  or **Stop**.

Your captured video is automatically stored in the currently chosen memory location, either Phone or Memory Card.


- Use the accompanying **Video player** application to view your video recording.

Video recorder options

To change settings, within the video recorder viewfinder screen, tap **Option** to view the menu:

- **Camcorder Setting** allows you to change settings such as white balance, brightness (EV) and night mode.
- **Video Setting** allows you to select the video quality: Low, Normal or High. The latter uses the most memory.
- **Effect Setting** allows you to apply a special effect to the captured video, such as greyscale, various sepia tints or colour inversion.
- **Restore Default** will return all video recorder settings back to their defaults.

Video player

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Video Player**. A list of your videos will be shown.
- 4 To see options for a video, tap on an entry. The menu shows a number of options:

- **Play** displays the player screen:




- **Forward** allows you to use the video as a screensaver, a power on or power off display or send it to someone via Bluetooth link. The latter option will guide you through the process of searching for and bonding with a Bluetooth device in your vicinity.
- **Rename** allows you to change the standard filename.
- **Delete** and **Delete All Files** allow you to clear away unwanted videos.
- **Sort By** allows you to determine the order in which the video clips are listed.
- **Bluetooth Settings** allows you to choose a Bluetooth headset and redirect the audio signal to that headset.

 
[Contents](#)

Audio player

The audio player allows you to listen to your MP3 music tracks or podcasts wherever you may be. The audio player can also play .WAV and .M4A files.

Note: You can connect the wired earphones to hear your music in stereo.


- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Audio Player**. The playback screen will be displayed:

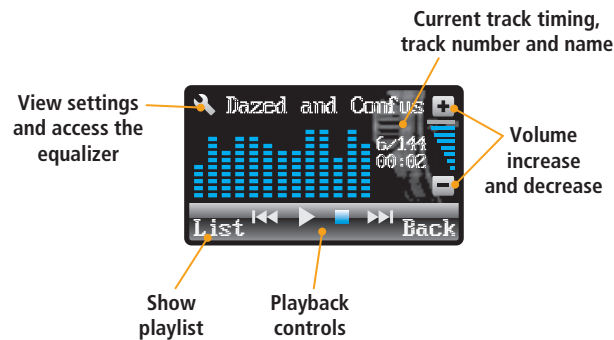

Selecting and playing a track

- 1 Tap **List** and then tap the required track name.
- 2 Tap **Play** to commence playback.

You can now use the playback controls at the foot of the screen.

During playback, tap  to gain quick access to the playback settings menu.

If a call is received (or initiated) while listening to a track, playback will be automatically stopped. If the Background Play option is enabled, then playback will automatically resume after the call is completed.

Plug in the supplied wired earphones to hear playback in stereo.

Adding or transferring audio files

There are three main ways to add or transfer audio files:

- Use a USB link with your computer. See the USB link section later in this guide for details.
- Use Bluetooth to link with another device. See the Bluetooth section later in this guide for details.
- Using MMS to send/receive audio file attachments. See the MMS messaging section earlier in this guide for details.

Audio player options

Within the audio playback screen, tap **List** and then tap **Option** to view the menu:

- **Details** shows information about the selected track.
- **Add to Ringtones** copies the track to your ringtones list. See the Settings section for detail about using it.
- **Add** allows you to find audio tracks stored on the memory card and add them to the playlist.
- **Remove** and **Remove All** allow you to clear away unwanted audio tracks.
- **Settings** contains the following items:

Refresh List set to On to automatically update the tracklist when changes occur.

Shuffle when enabled, plays tracks in a random order.

Repeat allows you to play either a single track or your whole collection continuously.

Background play when enabled, continues playing tracks even when you leave the audio player. Playback stops automatically when making or receiving a call. When this option is enabled, the track will automatically resume playing.

BT Stereo Output determines whether audio should be redirected to a Bluetooth stereo headphone device. This option can be enabled once you have chosen a suitable device using the option detailed below.

BT Stereo Headset allows you to locate/choose a suitable Bluetooth stereo headphone device to use with the audio player.

Sound recorder

Allows you to record face-to-face or telephone conversations (warn the caller first) or other soundscapes around you.

1 From the clock face, tap **Menu**.

2 Tap  (twice, if necessary).

3 Tap **Sound Recorder**. A list of any existing recordings will be shown.

To start recording: Tap **Option** and then tap **Record**.

To pause or stop recording: Tap either **Pause** or **Stop**.

As soon as you choose **Stop**, the screen will display an assigned numeric name for the recording in the editor screen.

Optionally use the editor to alter the assigned name.

Once done, tap **Option** and then tap **Save**.

The new file will be added to the list in the sound recorder main screen.


Sound recorder options

 
From the list screen, tap **Option**:

- **Record** to begin a new recording.
- **Play** the currently selected entry.
- **Append** to add further sound to the existing recording.
- **Rename** to edit the name of the currently selected entry.
- **Delete** and **Delete all files** allow you to keep the list free of clutter.
- **Settings**
 - File Format** allows you to choose between AMR, AWB and WAV formats. AMR is suited to voice recording; AWB is an updated version of AMR with a wider frequency band; whereas the WAV format is supported widely on personal computers and would be the one to choose if you intend to transfer your recordings.
 - Audio quality** allows you to choose between High and Low quality, which will affect the memory space required to store your recordings - high quality uses more memory.
- **Forward** allows you to copy the entry for use as an alert tone, a background sound that you can play during calls or send it to someone either via MMS message or by Bluetooth link. The latter option will guide you through the process of searching for and bonding with a Bluetooth device in your vicinity.

FM radio

This application allows you to listen to any FM radio stations available within your vicinity. The stereo earphones must be used uncoiled as the cable cleverly forms the radio aerial.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **FM Radio**. You will be asked to plug in the earphones. Do so and then tap the screen to continue.
- 4 The FM Radio screen will be displayed:

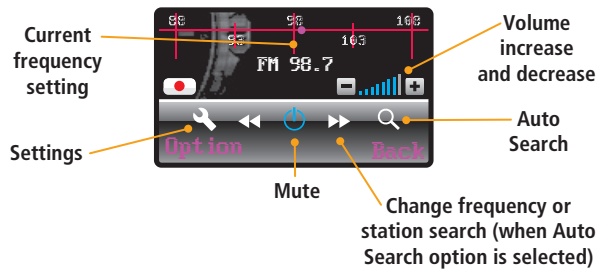

Finding a station

To search manually: Tap **◀◀** or **▶▶** to change the frequency.

To choose a frequency: Tap **Option** and then **Manual Input**. Enter the frequency and tap **OK**.

To auto search: Tap **Q** and then tap either **◀◀** or **▶▶** to locate the next radio station.

To create/use a channel list entry: Tap **Option** and then **Channel List**. Tap an existing entry to select its frequency or tap an empty entry to add a new frequency.

General settings

Use the **+** and **-** buttons to adjust the volume or tap **⏏** to mute / unmute.

Tap **⚙** to gain quick access to the settings menu.

If the **Settings > Background Play** option is enabled, then the radio output will continue while you are using other applications. Also, output will be muted during calls and will automatically resume once a call is completed.

WAP

The WAP application brings the power of the world wide web right to your wrist. Many websites are now optimised for compact screens and this application allows you to access and use them.

Note: To use WAP you must have either GSM data and/or a GPRS connection as part of your service provider agreement. You must also choose the correct settings to match your network. Please see **WAP connection configuration** at the end of this WAP section.

1 From the clock face, tap **Menu**.

2 Tap  (twice, if necessary).

3 Tap **WAP**. The screen will show the main options:

- **Homepage** takes you to the web location that acts as your starting point.
- **Bookmarks** provides a list of regularly used sites.
- **Recent Pages** gives you quick access to previously visited locations.
- **Offline Pages** allows you to view previously viewed pages that are stored within memory.
- **Input Address** allows you to enter a new web address.
- **Service Inbox** is the place where incoming WAP Push messages are stored.
- **Settings** contains the following items:
 - Edit Profile** selects the network configuration to use
 - Browser Options** sets the page timeout period and also whether pictures should be shown.
 - Service Message Settings** decides whether WAP Push messages should be received.
 - Clear Cache** removes all stored web page data from memory.
 - Clear Cookies** removes all stored cookies (identification information deposited by certain websites) from memory.

Accessing WAP sites

Access the main WAP options list and then use any of the first four options:

- **Homepage** - your portal to the web (usually a search engine such as Yahoo, Google, etc.).
- **Bookmarks** - websites saved from previous visits.
- **Recent Pages** - a history of recently accessed websites.
- **Enter Address** - where you enter a new website address.

When you have chosen a website, your sWaP Rebel will attempt to connect using either a GPRS connection or, failing that, a GSM data connection.

If the former cannot be used, then you will be asked for permission to use the latter (GSM connection speeds are lower than GPRS).

If your sWaP Rebel continually fails to use GPRS, then there may be a configuration problem - see WAP connection configuration for details.

Once a data connection is made, the website will be located and displayed.

Note: While it is possible to access normal websites, some will not display correctly because they are designed only for large screens. Many organisations offer WAP alternatives which are optimised for compact screens.

Within each webpage you will be able to tap on hyperlinks (usually shown in blue with or without an underline). You can also tap within text boxes in order to display the on-screen editor and enter alphanumeric characters.

While browsing online, there are a couple more options that appear within the list:

- **Refresh** reloads the current page.
- **Set as Homepage** uses the page you are viewing as your new portal.

- **Save Picture** allows you to select any displayed picture and save it to a memory location.

As mentioned above, the easiest way to create a new homepage is to visit it, then tap **Option** and then tap **Set as Homepage**.

You can also make a change offline from the main WAP options list by tapping **Settings**, then **Edit Profile**, tap your service provider's entry, tap **Edit Profile** and then edit the Homepage entry.

WAP connection configuration

In order to operate, the WAP browser requires a data connection with your network. This can be either using GPRS or a GSM data connection. Your contract agreement may not include such services - check with your network provider.

You also need to ensure that the correct network connection details are selected:

- 1 From the main WAP options list, tap **Settings** and then tap **Edit Profile**.
- 2 Locate your service provider's name from the list of operators and tap it.
- 3 Tap **Activate Profile** and then tap **Yes**.


If your service provider is not within the list, use a personal computer to access the sWaP website (<http://www.s-w-a-p.co.uk>). Go to the FAQs page. Download the procedure for adding new networks to your sWaP Rebel. You will also need the following information from your service provider:

- GSM data dial-up number
- GSM data username and password
- GSM data DNS IP address
- GPRS Access Point Name (APN)
- GPRS username and password
- Authentication type (i.e. Normal)

Once you have these details, use the downloaded instructions to enter them into the appropriate locations within your sWaP Rebel.


Settings

To ensure that your sWaP Rebel works the way that suits you, the main Settings section contains plenty of options to modify its appearance and operation. The Settings section also includes more applications for everyday use.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
 - **Pen Calibration** allows you to ensure that the touch screen reacts accurately to stylus taps.
 - **Organizer** contains a number of useful applications for everyday use.
 - **User Profiles** allow you to change all of the call and message alert characteristics in one go, to suit your location.
 - **Phone Setup** is where you apply basic phone settings, such as time and date, language, display characteristics, etc.
 - **Call Setup** lets you invoke call diverts, set call time reminders, etc.
 - **Network Setup** contains numerous network connection options.
 - **Security Setup** contains options such as SIM lock, Auto keypad lock, change password, etc.
 - **Restore Factory Settings** allows you to return all settings back to their default configurations.

Pen Calibration

From time to time (once a month recommended), or after a complete restore factory settings operation, you may need to calibrate the screen to restore its accuracy.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Pen Calibration**.


The calibration wizard will be displayed and will take you through the procedure. Be sure to use the supplied stylus and view the screen exactly as you would in normal operation as you confirm the touch points.

TIPS:

- When tapping on the displayed touch points, view the screen exactly as you would in normal operation.
- For best results, go through the procedure twice.
- Repeat the procedure once a month to keep accuracy at the optimum level.

Organizer

The organizer contains a number of useful applications for everyday use.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Organizer**. The list of applications will be displayed:
 - [Calendar](#)
 - [To Do List](#)
 - [Alarm](#)
 - [World Clock](#)
 - [Calculator](#)
 - [Bluetooth](#)
 - [File Manager](#)
 - [Stopwatch](#)

Calendar

This application will ensure that you never forget your important dates again.

- Access the [Organizer](#) and then tap **Calendar**.

When the calendar opens you will see the current month to view and today's date will be highlighted.

Use the left and right buttons on the top row to change the year and month.

To set a calendar reminder

1 Double tap on a day.

2 Tap **Add Task**.

3 Choose the task type, then use the scroll bar to change between the various fields:

- Start date and time,
- End date and times,
- Note - add an explanation of the task (tap **Option** > **Use Templates** for some pre-prepared notes),
- Alarm - choose how far in advance of your task that you'd like the alarm to be given.
- Repeat - determine whether this will be a one off or a regular reminder. Options include: Once, Everyday, occur on particular Days, Weekly or Monthly.
The Days option allows you to include/exclude particular days of the week. When a day is enclosed within a border, it is included.
- Location - add a note reminding yourself where the task will take place.
- Priority - determine whether it is a low, medium or high priority.

4 Tap **Done** and then tap **Yes** to confirm. The new entry will be added to the Task List and a red border will be placed around each date for which the reminder is valid.

To jump to a specific date

1 Double tap on a day.

2 Tap **Jump to Date** and enter the required date.

3 Tap **OK** and the chosen date will be shown highlighted in a month to view page.

To Do List

- Access the [Organizer](#) and then tap **To Do List**.

When the list opens you will see any existing reminders, including all programmed reminders from the Calendar application.

- Tap **Add** (or **Option** and then **Add**, if shown) to create a new entry, or tap an existing entry to view its details.

Follow the procedure outlined for the Calendar (from step 3).

- Use **Delete Task** or **Delete All** to keep the list free from clutter.
- Tap **Send vCalendar** to send the currently selected entry to someone else or save it as a file. You have the following choices:
 - Send By SMS
 - Send By MMS
 - Send By Bluetooth
 - Save as File

In each case, the relevant application will be invoked.

Alarm

- Access the [Organizer](#) and then tap **Alarm**.
Allows you to quickly set one or more alarms.

To set an alarm

- 1 In the opening page, tap a vacant alarm entry and then use the scroll bar to change between the various fields:
 - On/off - Set to On,
 - Time - Enter the alarm time.
 - Repeat - determine whether this will be a one off or a regular reminder. Options include: Once, Everyday, occur on particular Days, Weekly or Monthly.
The Days option allows you to include/exclude particular days of the week. When a day is enclosed within a border, it is included.
 - Snooze - Optionally set a Snooze time (after which the alarm will repeat).
 - Alert type - If necessary, change the alert type using the combinations of ring and vibration alerts.
- 2 Tap **Done** and then tap **Yes** to confirm.
Your new alarm will be ticked to show that it's active.

World clock

- Access the [Organizer](#) and then tap **World Clock**.
The opening page shows a world map with cross hairs within the timezone that is configured as your location in the Time and Date settings.
The current time and date for the highlighted location is shown along with either a moon or sun symbol to indicate night and day.
- You can either use the left and right buttons to change to the next city or tap on the map to highlight the nearest featured city within each timezone.
- Tap **Option** to choose whether the Daylight Saving Time should be switched on or off.

Calculator

- Access the [Organizer](#) and then tap **Calculator**.
The calculator keypad and readout will be shown.
- Tap your figures and operand(s) and then either tap the **=** key to reveal the answer.

Bluetooth

- Access the [Organizer](#) and then tap **Bluetooth**.

This section contains all tools required to locate, pair and manage Bluetooth devices for use with your sWaP Rebel.

The opening page lists the main menu of options:

- **Power** determines whether the Bluetooth circuitry is switched on.
- **Search Bluetooth Device** initiates a search for other Bluetooth devices in the vicinity.
- **My Devices** shows details for all paired Bluetooth devices, plus your sWaP Rebel.
- **Active Device** lists all paired Bluetooth devices that are currently active.
- **Settings** contains various options:

Visibility determines whether your sWaP Rebel can be seen by other Bluetooth devices that are not yet paired with it.

Change Device Name allows you to change the Bluetooth name by which your sWaP Rebel is known.

Authentication when set to On, allows a Bluetooth device to reconnect to your sWaP Rebel (once it has been initially authorized) without confirmation.

Audio Path allows you to transfer all audio through the microphone and speaker of a suitable Bluetooth device.

FTP Settings determines where data to send and be received should be stored in memory. It also allows you to control whether the other device can write to memory as well as read.

- **About** shows details for your sWaP Rebel including Bluetooth device name, address and supported services.

Pairing with another device

In order to work together, Bluetooth devices must be paired to produce a trusted bond between them. During the pairing process, one device must search while the other is made to be 'visible' and wait to be discovered.

To search for and pair with other devices

- 1 From the main Bluetooth menu, tap **Search Bluetooth Device**. If the Bluetooth circuitry was previously Off, it will be switched On and a search for other devices will be carried out for up to one minute. Ensure that the other devices have been set to be visible.
Any found Bluetooth devices will be listed in the Discovered Device page.
- 2 Tap the name of the device to bond with, enter a valid passcode and then tap **OK**. For most devices, there is no fixed passcode number and a common four digit number must be decided on between the users. Tap **Yes** to confirm pairing.

To make your sWaP Rebel discoverable

- 1 From the main Bluetooth menu, tap **Settings** and check the current setting for the **Visibility** option.
- 2 If **Visibility** is currently **Off**, tap it to change its state to **On**.
- 3 When your sWaP Rebel is discovered, the other device will initiate pairing and you will be asked to enter a four digit passcode that matches the one entered into the other device. Enter the code and confirm pairing.
Your sWaP Rebel and the other device will now share a common bond and can reconnect and transfer information at any time.

To break the pairing bond

When you no longer want to use the devices together, you can break the bond.

- 1 Tap **My device** and then tap the name of the other device.
- 2 Tap **Delete** and then tap **Yes** to remove the pairing bond.

File manager

- Access the [Organizer](#) and then tap **File Manager**.

Allows you to organise the memory storage area within your sWaP Rebel. The screen will show the memory card locations along with total size and free space information.

To view folders/files: Tap **Option** and then tap **Open**. If necessary, use the scroll buttons on the right side to bring a particular folder into view.

Tap on a folder to view its files.

Tap on a file to view a menu of options including: View, Play, Forward, Detail, Rename, Copy, Move, Delete, Delete all files and Sort by.

To create a new folder: Tap **Option** and then tap **New folder**. Enter a name for the new folder.

To format the memory card: CAUTION: The **Format** option will wipe all files and folders from the storage area. Tap **Option** and then tap **Format**.

Stopwatch

- Access the [Organizer](#) and then tap **Stopwatch**.

This application actually provides multiple stopwatches in one.


The screen will show two options:

Typical Stopwatch and nWay Stopwatch.

The **Typical Stopwatch** option gives you two variations:

- **Split Timing**, where each tap of **Split** saves the current elapsed time while the main counter continues. Each subsequent tap of **Split** saves another elapsed time from the very beginning up to the point at which Split was tapped.
- **Lap Timing**, where each tap of **Lap** saves the current elapsed time since the last moment that Lap was tapped, i.e. the counter is reset to zero each time.

The **nWay Stopwatch** provides a main counter and four sub-counters of time. The main counter runs continuously but a sub-counter is only incremented when it is highlighted. When you tap a different sub-counter, it begins to increment, while the previous one is frozen. In this way the four sub-counters can accumulate separate lots of time.

Note: If a stopwatch is left running while you use other features, the  icon will be shown on the clock face. Leaving a stopwatch running for long periods can shorten battery life.

User Profiles

These allow you to change the whole nature of your call-, key-, message- and alarm- alerts in one easy action.

Note: **Flight Mode** switches off all communication aspects of your sWaP Rebel to let you use other features without infringing 'no mobile' rules in certain areas. You can also choose whether to see a Flight Mode option whenever you first switch on.

1 From the clock face, tap **Menu**.

2 Tap  (twice, if necessary).

3 Tap **User Profiles**.

A list of all profiles will be shown:

General	Headset
Meeting	Bluetooth
Outdoor	Flight Mode
Indoor	

To use a profile

- Tap a profile and then tap **Activate** or **OK**. Your choice will be confirmed.

To adjust a profile

1 Tap a profile name and then tap **Customize**. You can now adjust the following:

- **Tone Setup** for all instances:
Incoming calls, alarms, power on and off, incoming messages and keypad tones.
- **Ringtone** to adjust the volume for ring tones.
- **Key Tone** to adjust the volume for key tones.
- **Alert Type** to choose ring, vibrate or a mixture of the two to announce incoming calls.
- **Voice Recognize** to switch the voice recognition feature on and off.
- **Ring type** to choose single, repeat or ascending alerts.
- **Extra Tone** to allow extra tones for warnings, errors, etc.
- **Answer Mode** allows you to enable or disable any-key answering of incoming calls.

Phone Setup

Contains many configuration options to customise the operation of your sWaP Rebel.

1 From the clock face, tap **Menu**.

2 Tap  (twice, if necessary).

3 Tap **Phone Setup**.

The menu options will be shown:

- **Swipe Function** allows you to link any of six sWaP Rebel functions to a handwriting gesture on the clock face. Thus, you could make an upward stroke of the stylus on the clock face to immediately cause your Phonebook to be shown. There are four swipe gestures that can be defined.
- **Time and Date** allows you to set the current time and date. You can also determine the time and date formats and define your nearest major city within your timezone.
- **Schedule Power On/Off** allows you to maximise your power efficiency while you're asleep by choosing times to automatically switch your sWaP Rebel off and on.
- **Language** lets you choose the appropriate language for all menus and messages within your sWaP Rebel.
- **Preferred Input Method** determines which on screen keypad is displayed first when you need to enter details.
- **Display Characteristics** contains numerous settings related to the visual aspects of operation:
 - Wallpaper** allows you to choose the image that is displayed behind all menus. You can choose a standard image from the **System** option or choose one of your own that is stored within memory using the **User defined** option.
 - Screen Saver** allows you to choose an image that will be displayed during periods of inactivity. You can choose a standard image from the **System** option or choose one of your own that is stored within memory using the **User defined** option. You can also disable the screen saver mode.

Power On Display and **Power Off Display** allow you to choose a picture or animation to be shown when your sWaP Rebel is powered on and off. You can choose a standard image from the **System** option or choose one of your own that is stored within memory using the **User defined** option.

Show Date and Time determines whether the current data and time are shown on the clock face page.


Show Operator Name determines whether the name of the current network provider is displayed on the clock face page.

Clock type allows you to choose the clock face design for the standby screen.

- **Speed Dial** allows you to define up to eight of your most regularly used phone numbers and associate them with dial numbers 1 to 8. Once enabled, when you are viewing the clock face, tap and hold as you normally would to enter the dial page, but then tap and hold a number between 1 and 8 to call the associated phone number.
- **Dialing Vibrator** determines whether your sWaP Rebel should provide vibration feedback each time you dial a digit.
- **Disable Sleep Mode** determines whether or not your sWaP Rebel should enter sleep mode when idle. Setting this option to On will affect the standby battery timing.
- **Auto Update of Date and Time** determines whether the network date and time signal should be used to update your sWaP Rebel settings.
- **Handwriting Setting** allows you to choose a Pen Speed and Pen Color for use in handwriting recognition applications.
- **LCD Backlight** allows you to adjust the brightness of the touch screen backlight.

Call Setup

Contains configuration options related to call handling by your network and by your sWaP Rebel.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Call Setup**.

The menu options will be shown:

- **Caller ID** determines whether your phone number will be declared to people that you call. You can choose to **Hide ID**, **Send ID** or leave the decision to be **Set By Network**
- **Call Waiting** allows you to control whether you should receive an earpiece alert when a new incoming call is waiting during an existing call.*
You can **Activate**, **Deactivate** or **Query Status** to discover the current setting.
- **Call Divert** determines whether incoming calls should be diverted* to another number, often to a voicemail box. You can set call divert actions for any or all of the following scenarios:
Divert All Voice Calls
Divert If Unreachable
Divert If No Answer
Divert If Busy
Divert All Data Calls
Cancel All Divert
In each case, apart from the last, you can **Activate**, **Deactivate** or **Query Status** to discover the current setting. When setting a divert, you will be asked to enter the number to which calls should be diverted. This can be a voicemail box or another phone.

* These are network features and are subject to support from your service provider.

- **Call Barring** allows you to prevent calls being made or received, depending on a range of circumstances*.

Outgoing Calls: All Calls; International Calls or International Calls Except to Home Country.

Incoming Calls: All Calls or When Roaming (on a network other than your own).

Cancel All


Change Barring PW (password).

In each case, apart from the last two, you can **Activate**, **Deactivate** or **Query Status** to discover the current setting.

- **Restrictive Call** allows you to prevent your sWaP Rebel from making any outgoing calls.
Within this option, you can choose **Call / Receive** (for normal operation) or **Receive Only** (to restrict operation to receiving incoming calls only).
- **Call Time Reminder** allows you to invoke an earpiece reminder beep during outgoing calls in order to remind yourself about the length of the call. You can choose a **Single** beep once a particular call time period has elapsed or a **Periodic** beep which repeats each time an allotted time period elapses. In both cases, after choosing the reminder type you will be asked to enter the time period.
- **Call Time Display** when enabled, will show the length of the current call on the display.
- **Auto Redial** when enabled, will automatically try to redial a called number if connection is lost during the call.

Network Setup

Contains configuration options related to network selection and operation.


- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Network Setup**.

The menu options will be shown:

- **Network Selection** gives you tools to find and choose networks (subject to roaming agreements with your home network). You can initiate a **New Search** for networks, choose the **Selection Mode** as **Automatic** or **Manual** and, if set to Manual, **Select Network** to use.
- **Preferred Networks** allows you to maintain a list of networks that you prefer to use and assign each a weighting, so that your sWaP Rebel can make decisions on your behalf to match network availability at any time.
- **GPRS Connection** determines how data calls should be routed using GPRS. You can choose to **Always** use GPRS or use it only **When Needed**.


Security Setup

Contains options related to the secure use of your sWaP Rebel.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Security Setup**.

The menu options will be shown:


- **SIM Lock** when enabled, causes your SIM card to request a valid PIN code whenever your sWaP Rebel, or any other phone in which it is installed, is switched on. You are given only three attempts to unlock the SIM card and then it permanently locks itself until a PUK code is entered (available on request from your network provider).
- **Phone Lock** when enabled, locks your sWaP Rebel and requests its own PIN code (different to the SIM PIN code - 1122 as standard) before use. Use the **Change Password** option to alter the phone PIN code.
- **Auto Keypad Lock** allows you to choose a period of inactivity, after which your sWaP Rebel screen will lock. You can choose from 5 secs, 30 secs, 1 min or 5 mins of inactivity.

Once locked, you need to press the  button and then tap your stylus on a displayed target to unlock your sWaP Rebel.

- **Fixed Dial** allows you to define one or more phone numbers which may be dialled from your sWaP Rebel. When the Fixed Dial Mode is then enabled, only those numbers can be dialled. This feature is subject to support from your service provider.
- **Barred Dial** allows you to define one or more phone numbers which you wish to prevent being dialled from your sWaP Rebel. When the Barred Dial Mode is then enabled, those numbers are barred from being dialled. This feature is subject to support from your SIM and service provider.
- **Change Password** allows you to change three types of PIN code or password: Your SIM's main PIN code, your SIM's secondary PIN2 code or your sWaP Rebel's own password code (1122 as standard).
Choose the code that you wish to change, enter the old code and then enter the new code twice, as confirmation.

Restore Factory Settings

Allows you to return all options to their factory conditions and reboot your sWaP Rebel.

- 1 From the clock face, tap **Menu**.
- 2 Tap  (twice, if necessary).
- 3 Tap **Restore Factory Settings**.
- 4 Enter the sWaP Rebel password (1122 as standard) and tap **OK**.
- 5 Tap **Yes** to confirm.

USB link to your computer

 
Your sWaP Rebel uses an industry- standard USB connection to allow it to be linked to any similarly equipped personal computer. Using the USB link, you can do three main things:

- Transfer files of all types: Photos, video clips, sound recordings, music tracks, etc. between the two devices.
- Use your sWaP Rebel camera as a webcam and view it live on your computer.
- Charge your sWaP Rebel battery at the same time.

Note: Your sWaP Rebel can be switched on or off when linking or unlinking with the computer.

To link your sWaP Rebel and computer

- 1 Carefully insert the USB connection on the strap into a vacant socket on your computer.

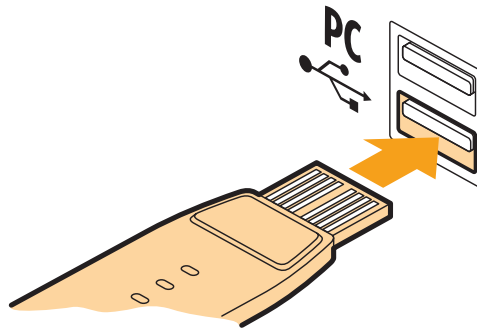

- 2 Your computer should respond to the new link and, once it has configured its drivers will respond in the same way as if any other USB storage device had been attached.

If your sWaP Rebel is switched off when connected then it will appear to the computer as a simple storage device.

- 3 Use your computer's file manager application to access the folders within your sWaP Rebel and transfer files across.

If your sWaP Rebel is switched on, you should see a menu on its screen offering the following choices:

- **Mass Storage** - Choose this option to allow the computer access to the storage devices contained within your sWaP Rebel.
- **Webcam** - Choose this option to turn your sWaP Rebel into a webcam.

On the computer, access the option that allows you to view the contents of external storage devices (USB sticks, etc.). When the window opens, it should show the live image from your sWaP Rebel camera.

At any time you can press the upper button to return to normal sWaP Rebel operation.

Important safety information

Exposure to radio frequency (RF) signals

Your sWaP Rebel contains a radio transceiver. When it is on, it sends and receives radio frequency (RF) signals. When you communicate using your sWaP Rebel, the system handling your call controls the power level at which it transmits.

Your sWaP Rebel is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational precautions

To ensure that your sWaP Rebel continues to serve you reliably, look after it as you would any other valuable item and also follow these guidelines:

Apart from the battery cover, do not open your sWaP Rebel or tamper with the internal circuitry as this could cause damage and will void your warranty.

Your sWaP Rebel is NOT waterproof. Avoid contact with water. If your sWaP Rebel becomes wet, switch it off and remove the battery. Carefully and completely dry out your sWaP Rebel and the battery before attempting to switch it back on.

Do not press hard on your sWaP Rebel as this may cause damage to the touch screen.

Do not expose your sWaP Rebel to direct sunlight, extremely high or low temperature, dusty/sandy conditions or very humid environments for extended periods of time as this may cause damage to the screen and/or internal circuitry.

Do not throw, beat or vibrate your sWaP Rebel in a manner that might damage the external casing, the sensitive touch screen or internal circuitry.

Do not use any corrosive chemical products or scouring pads to clean your sWaP Rebel. Use only soft wipe to clean it.

If your sWaP Rebel is lost or stolen, notify your network provider to initiate the cancellation of the SIM Card. You may be asked for the IMEI number which is printed inside the battery compartment and also on your sWaP presentation box. Write this number down in advance and store it in a safe place.

RF energy interference/compatibilities

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your sWaP Rebel may cause interference.

Facilities and hazardous areas

Turn off your sWaP Rebel in any facility where posted notices instruct you to do so. In certain cases it may be sufficient to place your sWaP Rebel into Flight Mode to disable the radio transceiver circuitry. However, in certain instances, switching off power altogether may be the only solution.

Hospitals and aircraft

Hospitals, health care facilities and aircraft regularly use equipment that is sensitive to external RF energy. Switch off your sWaP Rebel when instructed to do so or place it into Flight Mode.

Flammable liquids

Adhere to all warning signs in areas where flammable liquids are present, such as petrol/gas filling stations. Switch off your sWaP Rebel before entering such an area.

Medical devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between any mobile phone and a pacemaker.

People with pacemakers should:

- When it is switched on, always keep your sWaP Rebel more than 6 inches (15 centimetres) from the pacemaker.
- Never carry your sWaP Rebel in a breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Stop using and turn off your sWaP Rebel immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Important safety information (continued)

Batteries

To ensure optimal battery performance, charge your sWaP Rebel fully before using it.

When you charge the battery it will feel warm. This is usual and the battery contains temperature protection circuitry. However, we still strongly recommend that you do not wear your sWaP Rebel when charging the battery.

Never dispose of your sWaP Rebel in a fire.

Do not dispose of your sWaP Rebel in the household waste stream.

Recycle your sWaP Rebel either through a mobile phone recycling scheme or at a local waste recycling centre. Contact your local authorities for more information.

Vehicles

Do not use your sWaP Rebel when you are driving. It is illegal in many countries to make or receive calls while driving.

RF signals may affect improperly or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Specific Absorption Rate (SAR)

Your sWaP Rebel is a radio transceiver and meets R&TTE requirements for exposure to radio waves. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless phone devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), is 2W/kg averaged over ten (10) grams of tissue. Although the SAR is determined at the highest certified power level, the actual SAR level of your sWaP Rebel while operating can be well below the maximum value. This is because your sWaP Rebel is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a network transmitter, the lower the power output.

Before any mobile phone is available for sale to the public, it is tested to confirm compliance with the guidelines (e.g., at the ear) that conform to a uniform testing methodology determined by an expert standards body.

The maximum results for your sWaP Rebel when tested using the EGSM 900 and EGSM 1800 frequencies were as follows (all values are stated as Watts per Kg of head or body tissue averaged over 10 grams of tissue):

SAR values

- Please visit the sWaP website at: www.s-w-a-p.co.uk for accurate, up to date SAR values for your sWaP Rebel.

While there may be differences between the SAR levels of various phones and at various positions, they all met the R&TTE requirements for safe exposure. Please note that improvements to your sWaP Rebel model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

EU directive 2002/95/EC on the Restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).

All sWaP products put on the market into the EU and EFTA Member States are in compliance with the EU RoHS requirements. The European Union's Restriction of Hazardous Substances (RoHS) Directive (2002/95/EC) restricts the use of lead (Pb), mercury, cadmium, hexavalent chromium and two bromine-containing flame retardants: PBB (polybrominated biphenyls) and PBDE (polybrominated diphenyl ethers) in electrical and electronic products.

EU directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE)

It is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

FCC warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Data Transmission Cable

Position: The data transmission cable is wrapped inside the longer watch strap.

Length: 12.7cm

Function: Data transmission, charging and connecting to the headphone connector.

Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR, The SAR limit set by the FCC is 1.6 W/Kg.